22mm XW E-Stops

Key features:

- The depth behind the panel can be as little as 46.4 mm for 1 to 4 contacts (with terminal cover) for illuminated and non-illuminated units.
- SOCOJE's original "Safe break action" ensures that the NC contacts open when the contact block is detached from the operator.
- . 1 to 4NC main contacts and 1 or 2NO monitor contacts
- Push-to-lock, Pull or Turn-to-reset operator
- Models with mechanical indicator on the operator body show the normal/latched status (green: normal).
- Safety lock mechanism (IEC60947-5-5, 6.2)
- Degree of protection IP65 (IEC60529)
- · Fingersafe (IP20) terminals
- Three button sizes: ø38, ø40 and ø60 mm
- Push-ON illumination type available (40mm mushroom head)
- Direct opening action mechanism (IEC60947-5-5, 5.2, IEC60947-5-1, Annex K)
- RoHS compliant (EU directive 2002/95/EC).
- · UL c-UL listed. EN compliant
- UL NISD category emergency stop device (File# E305148)













UL File #E68961

Specifications

Applicable Standards	IEC60947-5-5, EN60947-5-5, JIS C8201-5-1, UL508, UL991, NFPA79, CSA C22.2 No. 14, GB14048.5
Operating Temperature	Non-illuminated: -25 to $+60$ °C (no freezing), Illuminated: -25 to $+55$ °C (no freezing)
Operating Humidity	45 to 85% RH (no condensation)
Storage Temperature	-45 to +80°C
Operating Force	Push-to-lock: 32N Pull-to-reset: 21N Turn-to-reset: 0.27N-m
Minimum Force Required for Direct Opening Action	80N
Min Operator Stroke Required for Direct Opening Action	4mm
Maximum Operator Stroke	4.5mm
Contact Resistance	$50 m\Omega$ maximum (initial value)
Contact Material	Gold plated silver
Insulation Resistance	$100 M\Omega$ minimum (500V DC megger)
Impulse Withstand Voltage	2.5kV
Pollution Degree	3
Operation Frequency	900 operations/hour
Shock Resistance	Operating extremes: 150m/s² (15G), Damage limits: 1000m/s² (100G)
Vibration Resistance	Operating extremes: 10 to 500Hz, amplitude 0.35mm acceleration $50m/s^2$ Damage limits: 10 to 500 Hz, amplitude 0.35mm acceleration $50m/s^2$
Mechanical Life	250,000 operations minimum
Electrical Life	100,000 operations minimum, (250,000 operations minimum @ 24V AC/DC, 100mA)
Degree of Protection	Operator: IP65 (IEC60529) Terminal: IP20 (when XW9Z-VL2MF is installed)
Terminal Style	M3.0 screw terminal
Recommended Tightening Torque for Locking Ring	2.0N·m
Wire Size	16 AWG max
Weight	ø40mm: 72g ø60mm: 81g

Part Numbers

Switches & Pilot Devices

Standard Button Without Mechanical Indicator

Style	Operator Type	Monitor Contact	Main Contact	Part Number
Non-Illuminated		1N0	1NC	XW1E-BV411M-R
		_	2NC	XW1E-BV402M-R
	40mm Mushroom	2N0	2NC	XW1E-BV422M-R
		1N0	3NC	XW1E-BV413M-R
		_	4NC	XW1E-BV404M-R
		1N0	1NC	XW1E-BV511M-R
	60mm Mushroom	_	2NC	XW1E-BV502M-R
		2N0	2NC	XW1E-BV522M-R
		1N0	3NC	XW1E-BV513M-R
		_	4NC	XW1E-BV504M-R
	40mm Mushroom	1N0	1NC	XW1E-LV411Q4M-R
Illuminated ¹		_	2NC	XW1E-LV402Q4M-R
	with built-in 24V	2N0	2NC	XW1E-LV422Q4M-R
	AC/DC LED	1N0	3NC	XW1E-LV413Q4M-R
		_	4NC	XW1E-LV404Q4M-R
	40mm Mushroom Push-ON LED ²	1N0	2NC	XW1E-TV412Q4M-R

Δ	1
	2

- The light is independent of the position of the switch, except for push-on LED type.
- The light only operates when the switch is pressed as it is internally wired.

Smooth Button With Mechanical Indicator

Style	Operator Type	Monitor Contact	Main Contact	Part Number	
		-	1NC	XW1E-BV4TG01MR	
Non-Illuminated		_	2NC	XW1E-BV4TG02MR	
		_	3NC	XW1E-BV4TG03MR	
	20	-	4NC	XW1E-BV4TG04MR	
	38mm Mushroom	1N0	1NC	XW1E-BV4TG11MR	
		1N0	2NC	XW1E-BV4TG12MR	
		1N0	3NC	XW1E-BV4TG13MR	
		2N0	4NC	XW1E-BV4TG22MR	
		-	1NC	XW1E-LV4TG01Q4MR	
Illuminated		-	2NC	XW1E-LV4TG02Q4MR	
		_	3NC	XW1E-LV4TG03Q4MR	
	38mm Mushroom	-	4NC	XW1E-LV4TG04Q4MR	
N. Committee of the com	with built-in 24V AC/DC LED ¹	1N0	1NC	XW1E-LV4TG11Q4MR	
		1N0	2NC	XW1E-LV4TG12Q4MR	
		1N0	3NC	XW1E-LV4TG13Q4MR	
		2N0	2NC	XW1E-LV4TG22Q4MR	



Note: Pushlock pull/turn reset switches are locked when pressed, and reset when pulled or turned clockwise.

1. LED lamp is not removable.

XW Series EMO Switches

Style	NC Main Contact	NO Monitor Contact	Part Number
	1NC	-	XW1E-BV401M-RH-EM0
40mm Mushroom	2NC	-	XW1E-BV402M-RH-EM0
THE REAL PROPERTY.	3NC		XW1E-BV403M-RH-EM0
1	4NC	-	XW1E-BV404M-RH-EMO
THE PARTY OF THE P	1NC	1N0	XW1E-BV411M-RH-EM0
EMU	2NC	1N0	XW1E-BV412M-RH-EMO
	3NC	1N0	XW1E-BV413M-RH-EMO
	2NC	2N0	XW1E-BV422M-RH-EMO

FB Enclosures with XW E-Stops







For added safety, Switch Guards and Nameplates can be used with E-Stop Enclosures



*LED illumination voltage: 24V AC/DC


Con	ıtact R	atings					
Rat	Rated Insulation Voltage (Ui)			250V			
Rat	Rated Current (Ith)				5A		
Rat	ed Oper	rating Voltage	(Ue)	30V	125V	250V	
	(NC)	AC 50/60Hz	Resistive Load (AC-12)	-	5A	3A	
Rated Operating Current	Main Contacts (N	AC 50/60HZ	Inductive Load (AC-15)	-	3A	1.5A	
Cur		DC	Resistive Load (DC-12)	2A	0.4A	0.2A	
ating			Inductive Load (DC-13)	1A	0.22A	0.1A	
pera	. 9	AC 50/60Hz	Resistive Load (AC-12)	-	1.2A	0.6A	
0 pe	Monitor Contacts (NO)	ts (7)	Inductive Load (AC-14)	-	0.6A	0.3A	
Rate		DC	Resistive Load (DC-12)	2A	0.4A	0.2A	
	သိ	50	Inductive Load (DC-13)	1A	0.22A	0.1A	

Minimum applicable load: 5V AC/DC, 1mA (reference value). The rated operating currents are measured at resistive/inductive load types specified in IEC 60947-5-1.

Illuminated Unit LED Ratings

Operating Voltage	Current
24V AC/DC ±10%	15mA

Mounting Hole Layout

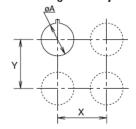

Size	øΑ	X & Y
40mm	22.3+0.4	70mm min

Panel Cutout




Depth Behind the Panel

•				
Depth (mm)	Description			
46.4	with indicator, 1 - 4 contacts, both illuminated and non-illuminated			
48.7	w/o indicator, 1 - 4 contacts, both illuminated and non-illuminated			


Measurements

Part Number Key



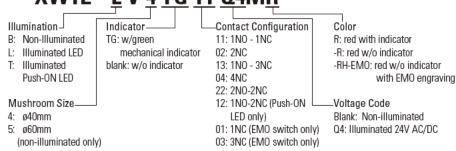


Terminal Arrangements (Bottom View)

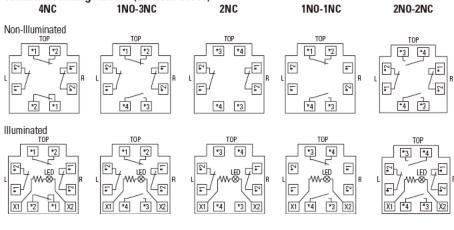

1NO-2NC



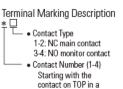





- 1: contact on the TOP 2: contact on the Left
- 3: contact on the Bottom
- 4: contact on the Right

Dimensions (mm)

Switches & Pilot Devices


XW Standard Button Non-Illuminated Without Indicator (with terminal cover)

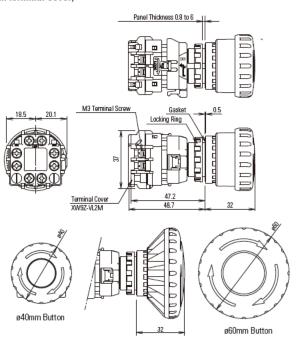

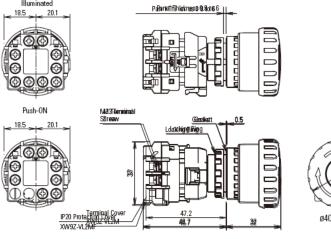






XW Smooth Button Non-Illuminated With Indicator (with terminal cover)

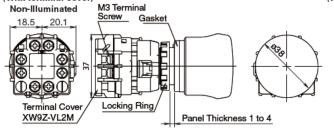

XW Smooth Button LED Illuminated/Push-ON With Indicator (with terminal cover)

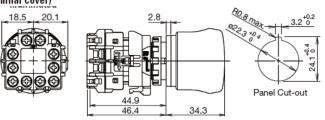

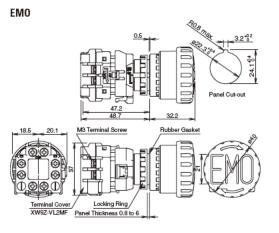

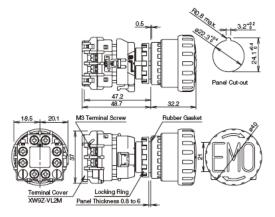

Accessories: Terminal Covers

	B	D . N . I	
Appearance	Description	Part Numbers	
	Terminal Cover for contact block	XW9Z-VL2M	
	IP20 Fingersafe Cover	XW9Z-VL2MF	

Accessories: Nameplates

Appearance	Legend	Part Number	Inner Ø	Outer Ø
CMERGENCL	(blank)	HWAV-0	22mm	60mm
Was Control	"Emergency Stop"	HWAV-27	22mm	60mm
	(blank)	HWAV5-0	22mm	80mm
STOP	"Emergency Stop"	HWAV5-27	22mm	80mm
	1			




Use 60mm nameplates for 38mm and 40mm mushroom buttons and 80mm nameplates for 60mm mushroom buttons.

Accessories: Shrouds Appearance Part Numbers E-Stop Types Applicable Standards 38mm, 40mm SEMI S2-0703, 12.5.1 HW9Z-KG1 Mushroom Head Compliant 38mm, 40mm, SEMI S2-0703, 12.5.1 & HW9Z-KG2 and 60mm SEMATECH Compliant Mushroom Head 38mm, 40mm SEMI S2 Compliant HW9Z-KG3 Mushroom Head (Approved by TUV) SEMI S2 Compliant 38mm, 40mm HW9Z-KG4 (Approved by TUV) Mushroom Head & SEMATECH

Operating Instructions

Removing the Contact Block

First unlock the operator button. Grab the bayonet ring \odot and pull back the bayonet ring until the latch pin clicks ②, then turn the contact block counterclockwise and pull out ③.

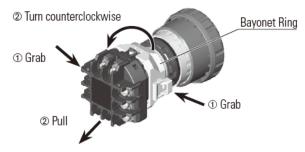


Notes for removing the contact block

- When the contact block is removed, the monitor contact (NO contact) is closed.
- 2. While removing the contact block, do not exert excessive force, otherwise the switch may be damaged.
- An LED lamp is built into the contact block for illuminated pushbuttons. When removing the contact block, pull the contact block straight to prevent damage to the LED lamp. If excessive force is exerted, the LED lamp may be damaged and fail to light.

Panel Mounting

Remove the locking ring from the operator and check that the rubber gasket is in place. Insert the operator from panel front into the panel hole. Face the side without thread on the operator with TOP marking upward, and tighten the locking ring using ring wrench MW9Z-T1 to a torque of 2.0 N-m maximum.

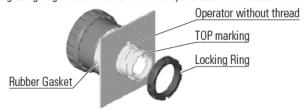


Notes for Panel Mounting

To prevent the XW emergency stop switch from rotating when resetting from the latched position, use of an anti-rotation ring (HW9Z-RL) or a nameplate is recommended.


Installing the Contact Block

First unlock the operator button. Align the small \blacktriangle marking on the edge of the operator with the small \blacktriangledown marking on the yellow bayonet ring. Hold the contact block, not the bayonet ring. Press the contact block onto the operator and turn the contact block clockwise until the bayonet ring clicks.

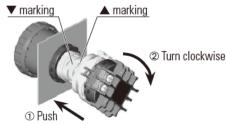

Notes for installing the contact block

Make sure that the bayonet ring is in the locked position. Check that the two projections on the bayonet ring are securely in place.

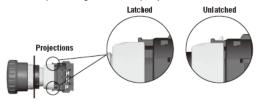

Wiring

The applicable wire size is 16 AWG maximum.


Screw Terminal

- 1. Wire thickness: AWG18 to 16
- 2. Tighten the M3 terminal screw to a tightening torque of 0.6 to 1.0 N·m.


Installing and Removing Terminal Covers

XW9Z-VL2M

To install the terminal cover, align the TOP marking on the terminal cover with the TOP marking on the contact block. Place the two projections on the bottom side of the contact block into the slots in the terminal cover. Press the terminal cover toward the contact block.

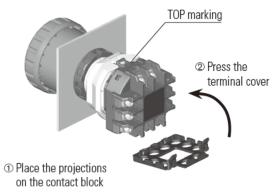


To remove the terminal cover, pull out the two latches on the top side of the terminal cover. Do not exert excessive force to the latches, otherwise the latches may break.

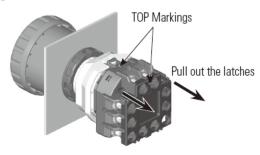

IP20 Protection Terminal Cover XW9Z-VL2MF

To install the IP20 protection cover, align the TOP marking on the cover with the TOP marking on the contact block, and press the cover toward the contact block.

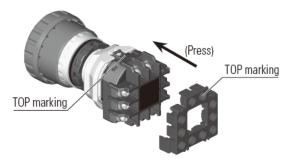



Switches & Pilot Devices

- 1. Once installed, the XW9Z-VL2MF cannot be removed.
- 2. The XW9Z-VL2MF cannot be installed after wiring.
- With the XW9Z-VL2MF installed, crimping terminals cannot be used.
- Make sure that the XW9Z-VL2MF is securely installed. IP20 protection cannot be achieved when installed loosely, and electric shocks may occur.

Contact Bounce

When the button is reset by pulling or turning, the NC main contacts will bounce. When pressing the button, the NO monitor contacts will bounce.

When designing a control circuit, take the contact bounce time into consideration (reference value: 20 ms).

LED Illuminated Switches

LED lamp is built into the contact block and cannot be replaced.

Installing the Anti-rotation Ring HW9Z-RL

Align the side without thread on the operator with TOP marking, the small s marking on the anti-rotation ring, and the recess on the mounting panel.

